

### Storage of medicines and medical devices

- Robustness: excellent resistance, one-piece structure made of steel
- 100 % hygiene: designed with a minimum of retention zones, and resistant to disinfecting products of hospital environment
- Customization thanks to a wide range of drawers and accessories
- Ward name identification
- Ergonomic and handy: designed for medical staff comfort
- Unique design and harmonious colours



**Robust**



**Hygienic**



**Ergonomic**



**Customizable**

- Double-column cabinet
- 2 heights: 160 or 180 cm
- Roller shutter door, or without closure
- Code lock (with spare key) or badge lock, or without lock
- Height 180 cm: horizontal or tilted levels in upper position

#### Customizable structure

3 available colours

Magenta pink

Apple green

Sky blue



## Standard configurations - PREMIUM

Structure WITH internal fittings


### MD – ISO TRAY

400 x 600 double-column mobile storage cabinet H180 equipped with:

- Horizontal levels on entire height
- Roller shutter door
- Code lock
- 12 perforated ISO trays H100
- 6 perforated ISO trays H200
- 18 pairs of end stops for ISO tray

Reference	Description
8YA246H180DMBAL_RM	NEOP "Premium" 2 col. 400x600 mobile storage cabinet H180 - MD - ISO tray – magenta pink
8YA246H180DMBAL_BC	NEOP "Premium" 2 col. 400x600 mobile storage cabinet H180 - MD - ISO tray – sky blue
8YA246H180DMBAL_VP	NEOP "Premium" 2 col. 400x600 mobile storage cabinet H180 - MD - ISO tray – apple green

*Dividers, label holders and label covers to order if necessary*

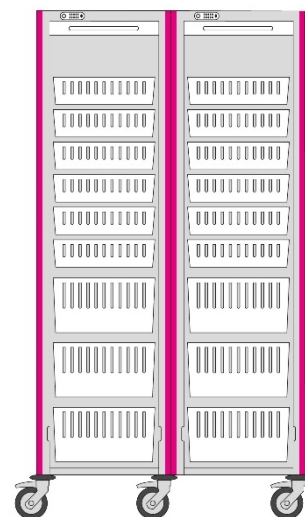


## Standard configurations – BASIC

Structure WITHOUT internal fittings

### MOBILE STORAGE CABINET WITHOUT ROLLER SHUTTER DOOR

400 x 600 double-column mobile storage cabinet H180 equipped with horizontal levels on entire height

Reference	Description
8YAH246H180_RM	NEOP "Basic" 2 col. 400x600 mobile storage cabinet H180 without roller shutter door – magenta pink
8YAH246H180_BC	NEOP "Basic" 2 col. 400x600 mobile storage cabinet H180 without roller shutter door – sky blue
8YAH246H180_VP	NEOP "Basic" 2 col. 400x600 mobile storage cabinet H180 without roller shutter door – apple green

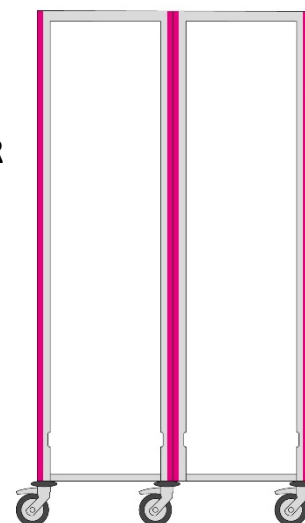


### MOBILE STORAGE CABINET WITH ROLLER SHUTTER DOOR AND CODE LOCK

400 x 600 double-column mobile storage cabinet H180 equipped with:

- Horizontal levels on entire height
- Roller shutter door
- Code lock

Reference	Description
8YAH246H180FRC_RM	NEOP "Basic" 2 col. 400x600 mobile storage cabinet H180 roller shutter door + code lock - magenta pink
8YAH246H180FRC_BC	NEOP "Basic" 2 col. 400x600 mobile storage cabinet H180 roller shutter door + code lock - sky blue
8YAH246H180FRC_VP	NEOP "Basic" 2 col. 400x600 mobile storage cabinet H180 roller shutter door + code lock - apple green

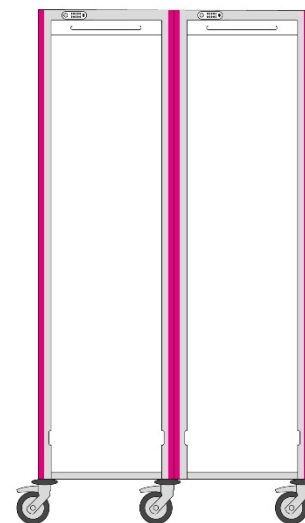

# Custom configurations

## STEP 1 - Cabinet structure

Choice of cabinet structure according to inside panel models

	Cabinet height 160 cm* with bumpers	Cabinet height 180 cm* with bumpers	Cabinet height 180 cm* without bumpers
Horizontal levels on entire height 40 mm level	8Y246H160P4	8Y246H180P4	8Y246H180SPCP4
Tilted levels in upper position 40 mm level	-	8Y246H180PI	8Y246H180SPCPI

This reference includes:

- **Structure**
- **Wheels**
- **Inside panels**

## STEP 2 - Cabinet customization

Selection of elements 1 to 3

*Closing system, locking system and colour strips must be ordered in duplicate for a double-column cabinet*

	Cabinet height 160 cm*	Cabinet height 180 cm*
<b>1</b> Roller shutter door	8Y002_4616F3	8Y002_4618F3

Storage cabinet can be ordered without closure.

**BE CAREFUL !** For a cabinet with horizontal levels on entire height without roller shutter door, you have to add two end stops ref. [8Y014](#).

<b>2</b>	Code lock	8Y003CODE3	8Y003CODE3
	Badge lock	8Y003BADGE3	8Y003BADGE3

Storage cabinet can be ordered without lock.

<b>3</b>	Colour	Magenta pink: 8Y004_0016RM	Magenta pink: 8Y004_0018RM
		Apple green: 8Y004_0016VP Sky blue: 8Y004_0016BC	Apple green: 8Y004_0018VP Sky blue: 8Y004_0018BC

\*For precise height, see technical data



Roller shutter closure



Code lock



Badge lock

Magenta pink

Apple green

Sky blue


## Accessories and internal fittings

Standard rail, push handle, trays...

*Please refer to product data sheets*



## Technical data

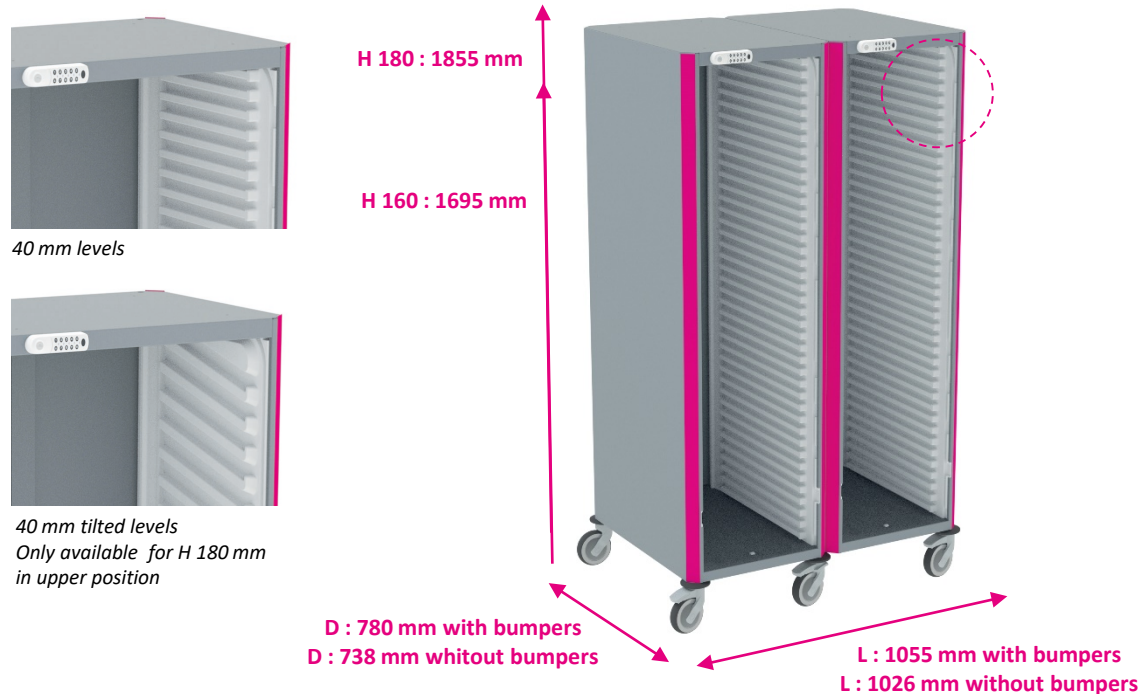

### Materials

<b>Structure</b>	Complete welded one-piece structure, electro-galvanized steel, EPOXY anti-corrosion treated
<b>Slides</b>	ABS (Acrylonitrile Butadiene Styrene)
<b>Closing system</b>	Roller shutter door: PP (Polypropylene), 2 mm thickness
<b>Wheels</b>	Simple non marking rubber wheels - Polyamide cover (PA)
<b>Bumpers</b>	6 non marking round stop blocks made of EVA (Ethylene Vinyl Acetate)
<b>Strip of colour</b>	70 micron calendered PVC vinyl film, with acrylic adhesive

### Additional information

<b>Wheels</b>	125 mm diameter - 2 breaking wheels + 2 swivelling wheels - wheel and wheel-pin double blocking	
<b>Empty weight</b>	H 160: 100 kg	H 180: 110 kg
<b>Capacity</b>	<b>H 160:</b> - 70 levels of 40 mm for cabinet with roller shutter door - 72 levels of 40 mm for cabinet without roller shutter door	<b>H 180 with horizontal levels:</b> - 78 levels of 40 mm for cabinet with roller shutter door - 80 levels of 40 mm for cabinet without roller shutter door  <b>H 180 with tilted levels:</b> 14 tilted 40 mm levels + 50 horizontal 40 mm levels
<b>Locking system</b>	Code lock / Badge lock	

### Packaging

<b>Packing</b>	Individually on pallet strapped and film-wrapped, or on wheels, with proper protection	<b>Dimensions L X D x H</b>	H 160: 80 x 150 x 185 cm H 180: 80 x 150 x 200 cm
<b>Gross weight (cabinet + packaging)</b>	H 160: 112 kg H 180: 122 kg	<b>Volume</b>	1,90 m <sup>3</sup>